

AIM & THURLBY THANDAR INSTRUMENTS

QPX1200S & QPX1200SP



1200 watt dc power supplies with PowerFlex regulation

Variable voltage/current combinations over a wide range

Up to 60 volts and up to 50 amps within a power envelope

Linear final regulation provides very low output ripple & noise


Analog, RS-232, USB, GPIB & LAN interfaces (model dependent)

aimtti.com

aimtti.co.uk | aimtti.us





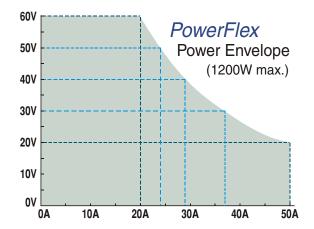

The QPX1200S is a laboratory dc power supply with a maximum total output power of 1200 watts and is suited to both bench-top and system applications. The QPX1200SP adds full digital remote control using USB, RS-232, LAN and GPIB interfaces. Both models include analog remote control.

PowerFlex

The QPX1200S is a different type of laboratory power supply designed to meet the need for flexibility in the choice of voltage and current.

A conventional PSU has a fixed current limit giving a power capability that reduces directly with the output voltage.

The TTi PowerFlex design of the QPX1200S enables higher currents to be generated at lower voltages within an overall power limit envelope. Each output can provide three times the current of a conventional PSU of the same maximum voltage and power (see power curve).

Example voltage/current combinations include 60V/20A, 48V/25A, 37.5V/30A, 26V/40A, and 20V/50A.

The PowerFlex regulator includes a linear output stage giving the QPX1200S exceptionally low output noise for a unit of this power, and ensuring good transient response

Bench or rack mounting

The QPX1200S is housed in a 350mm (13¾") wide case suitable for use on the bench-top. Output and remote sense terminals are mounted both on the front and on the rear panel along with the analog and logic interface connectors and, on the QPX1200SP, the bus interface connectors.

The power supply is 3U high and a rack mounting kit (RM310 or RM310A) is available as an option.

- ▶ PowerFlex design with 1200 watts maximum power
- ► Wide range of voltage/current combinations
- ▶ Up to 60V and up to 50A within a power envelope
- ► Linear final regulation provides very low output noise and fast transient reponse
- ▶ Setting by direct numeric entry or by spin wheel
- ▶ High setting resolution of 1mV in up to 60 volts
- ► Multiple non-volatile setting memories
- ► Variable OVP and OCP trips
- ► Low resistance and power calculation
- ► Analog control interfaces for voltage and current
- ▶ Bench or rack mounting with front and rear terminals
- ► GPIB. RS-232, USB & LAN (LXI) interfaces (OPX1200SP)


Power calculation

The meter for each output can be set to show the total power currently being provided to the load (V \times A) to a resolution of 0.1 watts.

The power is shown in addition to the voltage and current values.

Low resistance calculation

The meter for each output can be set to show the equivalent resistance of the load by displaying voltage divided by current.



Low resistance measurements

using a DMM utilise a low excitation current and suffer from thermal emf errors and other low voltage effects.

This function enables low resistance measurements to be made at high currents by using the remote sense terminals to create a four terminal connection. This can give much more reliable results for certain component types, such as magnetics, which operate at ampere levels.

Graphic display for clarity and ease of use

The QPX600D incorporates two high resolution graphic LCDs capable of showing numbers and text in a variety of sizes.

LIMITS OUTPUT OFF

The standard display mode shows

voltage and current in large characters along with text annunciators such as CV mode and Output On.



When settings are being changed, a dual display of parameters is used enabling existing and new settings, or actual and limit values to be viewed simultaneously.

More complex functions are provided with text prompts or complete selection menus.



Current meter averaging

When measuring rapidly varying loads it can become difficult to get useful readings from the current meter.

By selecting meter averaging, the reading is stabilised by averaging the last four readings to reduce the speed and extent of the variation.

Numeric or rotary entry

Voltage and current levels can be set directly via the numeric keypad. Alternatively settings can be changed via the jog wheel at user selectable increments.

Multiple settings stores

Non-volatile stores are incorporated for rapid recall of voltage and current settings and are useful for repetitive testing applications.

Separate stores are provided for each output.

OVP and OCP trips

Variable trips for over-voltage and over-current are provided on each output. Unlike a limit setting, the trip setting turns the output off and provides a different level of protection.

For example, when repetitively testing a unit which normally takes a peak current of 10A, the current limit could be set to 11A and the OCP to 10.1A to ensure that a faulty unit will trip the supply off and not be damaged by over

The output trip can also be activated by other fault conditions including over temperature and remote sense mis-wiring. The cause of the trip is shown on the display.

Analog and Logic interfaces



Both models incorporate analog interfaces for voltage control of both output voltage and output current (non-isolated).

The control voltages are digitised to control the PSU and the scaling can be selected as 0 to 5V or 0 to 10V for zero to full scale.

Monitor outputs for voltage and current are also provided, and can similarly be selected as 0 to 5V or 0 to 10V.

An opto isolated logic control signal is provided for control of output on/off. This can be menu selected as true = output on, or true = output off.

An opto isolated open-collector logic output signal is also available. This can be menu selected as true or false for output enabled or disabled, current limit, power limit, or any fault trip.





www.AINNOTECH.com Email: korea@ainnotech.com TEL:02,409,3222 FAX,02,409,3229 서울시 송파구 가락동 10-9 현성 B/D 2F









QPX1200SP - comprehensive bus remote control

To meet a wide variety of needs, the OPX1200SP adds a comprehensive array of digital bus interfaces. RS-232, USB, GPIB and LAN (Ethernet) with LXI support are all provided as standard.

Each of the digital bus interfaces provides full control of voltage, current, output on/off and set-up, plus read-back of voltage, current and status. The interfaces are at ground potential and are opto-isolated from the output terminals.



The GPIB interface is compliant with IEEE-488.1 and IEEE-488.2. Currently GPIB remains the most widely used interface for system applications.



An RS-232/RS-423 interface is provided for use with legacy systems. This type of serial interface remains in common useage and is perfectly satisfactory for

the control of power supplies because data speed is not an issue.



USB provides a simple and convenient means of connection to a PC and is particularly appropriate for small system use. A USB driver is provided which supports Windows 2000, XP, Vista and Windows 7.



The LAN interface uses a standard 10/100 base-T Ethernet hardware connection with ICMP and TCP/IP Protocol for connection to a Local Area

Network or direct connection to a single PC. This interface supports LXI and is highly appropriate for system use because of its scalable nature and low cost interconnection.



The LAN interface is compliant with LXI class C. LXI (LAN eXtensions for Instrumentation) is the nextgeneration, LAN-based modular architecture standard for automated test systems managed by

the LXI Consortium, and is expected to become the successor to GPIB in many systems. For more information on LXI and how it replaces GPIB, or operates along side it, go to: www.tti-test.com/go/lxi

IVI Driver

An IVI driver for Windows is included. This provides support for common high-level applications such as LabView*, LabWindows*, and HP/ Agilent VEE*.

- * LabView and LabWindows are trademarks of National Instruments. HPVEE (now Agilent VEE) is a trademark of Agilent Technologies.
- * Windows is a trademark of Microsoft.

QPX1200L

The QPX1200L is identical to the QPX1200SP but omits the GPIB interface.

Other models in the QPX series

For those requiring only a dual output power supply, the QPX600D offers dual outputs of 600 watts each using PowerFlex+ regulation.

Go here for details: www.tti-test.com/go/qpx

QPX1200S, QPX1200SP - Technical Specifications

OUTPUT SPECIFICATIONS

Voltage/Current Levels

Voltage Range: 0V to 60V Current Range 0A to 50A

Up to 1200W - see PowerFlex power envelope graph. Power Range: Operating Mode: Constant voltage or constant current with automatic cross-over

Output Setting

Voltage Setting: By floating point numeric entry or rotary jog wheel; resolution 1mV. Current Setting: By floating point numeric entry or rotary jog wheel; resolution 10mA.

Voltage - 0.1% ± 2mV Setting Accuracy: Current - $0.3\% \pm 20$ mA

Up to 10 set-ups can be saved and recalled via the keyboard (or the digital interfaces on QPX1200SP and QPX1200L). Setting Stores:

Keyboard & Rotary Control

All functions, including the selection and set-up of the remote control interfaces, can be set from the keyboard. The rotary Jog control can be used to adjust output voltage and current settings in a quasi-analogue mode. The output to be controlled is first selected with the appropriate Control key.

Output Performance

Load regulation: <0.01% +5mV (CV mode) for any load change within the

PowerFlex envelope, using remote sense. Line regulation: <0.01% +5mV for a 10% line voltage change

Ripple & Noise: Typically <3mV rms, <20mV pk-pk, (20MHz bandwidth). Transient Response: <250µs to within 100mV of set level for 5% to 95% load change.

Temp. Coefficient: Typically <100ppm/oC.

Sensing: Selectable local or remote sensing.

Output Protection

Output will withstand forward voltages of up to 70V. External Voltage:

Reverse protection by diode clamp.

Automatic protection within PowerFlex control system. Power Limit:

The output will be shut down if any of the four trip conditions listed Fault Trip:

below occur.

Over Voltage (OVP): Settable 2V to 65V in 0.1V steps Over Current (OCP): Settable 2A to 55A in 0.1A steps

Monitors internal temperature rise to protect against excess ambient temperature or blocked ventilation slots. Over Temperature:

Sense Error: Monitors the voltage between the remote sense terminals and output

terminals to protect against mis-wiring.

Output Switching

Push switch operating electronic power control. LED indication of On state

Connection

Output Terminals: Front and rear output terminals. Safety terminals accepting 6mm wire

diameter, 6mm plugs or 8mm spades at 50 Amps max, or 4mm plugs at 30 Amps max.

Sensing Terminals: Screw-less terminals on front panel and on rear panel.

METERING

Large dot-matrix black-on-white backlit LCD. Display Type:

Meter Function: 5 digit voltage meter and 4 digit current meter. Display of limits values, memory contents etc. Wide range of alpha-numeric messages/menus.

Limits Display: Limits settings can be displayed simultaneously with measurements. Meter Resolution: Voltage: 1mV. Current: 10mA

Voltage: 0.1% of reading \pm 2 digits (CI mode and Unreg) Meter Accuracy:

Current: 0.3% of reading ± 2 digits (CV mode and Unreg)

Additional Metering Functions

Display shows calculated power in watts. Resolution 0.1W. Accuracy $0.5\% \pm 0.1W$ V x A

Display shows calculated resistance. Resolution up to 5 digits.

Measurement uncertainty is shown on display.

ANALOG & LOGIC INTERFACE

Analog Remote Control and Monitoring

Non-isolated inputs and outputs to set voltage and current limit and to monitor actual output voltage and current. These signals are referenced to the negative output and have a range of 0 to 10V or 0 to 5V (selectable via the keyboard). Note that the analog control voltage is digitised within the power supply.

Control Accuracy: Voltage: $0.3\% \pm 4mV$; Current: $0.5\% \pm 40mA$ Monitor Accuracy: Voltage: $0.3\% \pm 4mV$; Current: $0.5\% \pm 40mA$

Logic Control Input and Output

LOGIC IN is a rear-panel opto-isolated input that is activated at an input current greater than approximately 1mA. User can set LOGIC IN (via the keyboard) to enable the output, disable the output, or be ignored when it is activated.

LOGIC OUT is an isolated rear-panel open-collector output that will sink up to 2mA when activated ('switch closure'); the maximum voltage that can be applied to LOGIC OUT is 30VDC. User can set

LOGIC OUT to be 'closed' or 'open' for output enabled or disabled, current limit (CI mode), power limit (UNREG mode), or for any fault trip.

DIGITAL BUS INTERFACES (QPX1200SP only)

The QPX1200SP offers full remote control and read-back using RS-232, USB, GPIB or LAN (compliant with LXI class C). All interfaces are at ground potential and opto-isolated from the output terminals. The QPX1200L has USB, RS-232 and LXI compliant LAN only (no GPIB).

RS-232

Standard 9-pin D connector. Baud rate 9,600.

USB

USB 2.0 connection (backwards compatible with USB 1.x). Operates as a virtual COM port.

GPIB (IEEE-488)

The interface conforms with IEEE-488.1 and IEEE-488.2.

Ethernet (LAN)

Standard 10/100 base-T hardware connection. ICMP and TCP/IP Protocol for connection to Local Area Network or direct connection to a single PC.

LXI Compliance

LAN interface is compliant with LXI class C. (LXI is the abbreviation for Lan eXtensions for Instrumentation). For more information visit: www.tti-test.com/go/lxi

DIGITAL PROGRAMMING PERFORMANCE (QPX1200SP only)

Setting Accuracy and Resolution

As per Manual Control (see Output Setting under Output Specifications)

Programming Speed

Command Delay: Typically <100ms between receiving the command terminator for a step

voltage change at the instrument and the output voltage beginning to

change.

DRIVER SOFTWARE SUPPLIED (QPX1200SP only)

An IVI driver for Windows is supplied. This provides support for common applications such as LabView*, LabWindows*, HPVEE* etc.

USB Driver

An installation file is supplied which calls a standard Windows* USB driver.

- * LabView and LabWindows are trademarks of National Instruments. HPVEE (now Agilent VEE) is a trademark of Agilent Technologies.
- * USB interface is supported for Windows 2000, XP, and Vista. Windows is a trademark of Microsoft.

GENERAL SPECIFICATIONS

Input

110V to 240V AC ±10%, 50/60Hz. Installation Category II. AC Input:

Input Power: 1600VA max. Temperature & Environmental

Operating Range: +5°C to +40°C, 20% to 80% RH

Storage Range: -40°C to + 70°C

Environmental: Indoor use at altitudes up to 2000m, Pollution Degree 2.

Cooling: Intelligent variable-speed fans

Safety & EMC

Safety: Complies with EN61010-1 Complies with EN61326 EMC:

Physical

Size: 350 x 130 x 413mm (WxHxD) (3U height) .

Weight: 9.2kg (20lb).

Folding legs are incorporated that can be used to angle the front panel upwards when required. Benchtop Operation:

MODEL RANGE

QPX1200S - Analog interface only QPX1200SP - Analog, USB, RS-232, LAN and GPIB interfaces.

Rack Mount (RM310 or RM310A)

19 inch 3U rack mount.

Thurlby Thandar Instruments Ltd. operates a policy of continuous development and reserves the right to alter specifications without prior notice.

Accuracy specifications apply for the temperature range 18°C to 28°C after 1 hour warm-up.

Designed and built in Europe by:



Thurlby Thandar Instruments Ltd.

Glebe Road, Huntingdon, Cambridgeshire. PE29 7DR United Kingdom Tel: +44 (0)1480 412451 Fax: +44 (0)1480 450409

Fmail: sales@aimtti.com Web: www.aimtti.com



InnoTech www.AINNOTECH.com

(주)에이이노텍 Email: korea@ainnotech.com

TEL:02,409,3222 FAX,02,409,3229

서울시 송파구 가락동 10-9 현성 B/D 2F







Product Summary

Laboratory Power Supplies

Bench and system power supplies from 30 watts up to 1200 watts using linear, mixed-mode and PowerFlex regulation technologies.

Waveform Generators

Analog and digital (DDS) function generators, true arbitrary generators, arbitrary/function generators and pulse generators.

Precision Measurement Instruments

Benchtop DMMs, frequency counters, component measurement instruments (LCR), electronic dc loads, current probes.

RF and EMC Test Equipment

Spectrum analyzers, signal generators, frequency counters, power meters, emc measurement instruments.



Company name and product brands

Thurlby Thandar Instruments Ltd. (TTi) is one of Europe's leading manufacturers of test and measurement instruments.

Products have been sold under two brand names:

TTi and Aim.



In the future, however, the full product range will be branded Aim-TTi.



This changeover will be gradual and many products will continue to carry the TTi or Aim brands for some time to come.

Web Addresses (URLs)

The preferred URL for obtaining information concerning Aim-TTi products is:

www.aimtti.com (international customers)

Customers in the UK should use the URL: www.aimtti.co.uk

Customers in the USA should use the URL:

www.aimtti.us

Note that previous URLs such as www.tti-test.com will continue to operate for the time being.



www.AINNOTECH.com

Email: korea@ainnotech.com TEL:02,409,3222 FAX,02,409,3229

서울시 송파구 가락동 10-9 현성 B/D 2F

Designed and built in Europe by:



Thurlby Thandar Instruments Ltd.

Glebe Road, Huntingdon, Cambridgeshire PE29 7DR England (United Kingdom)

Tel: +44 (0)1480 412451 Fax: +44 (0)1480 450409 Email: info@aimtti.com Web: www.aimtti.com