

AInnoTech

(주)에이이노텍

FiberAll

www.FIBERALL.co.kr

광통신 전문 소평몰! 파이버올!

www.AINNOTECH.com

Email: korea@ainnotech.com

TEL:02,409,3222 FAX,02,409,3229

서울시 송파구 가락동 10-9 현성 B/D 2F

UV Spot Curing System

OmniCure® S1500

The OmniCure® S1500 delivers power, control and reliability in an extremely cost-effective, affordable system.

Powerful 200 Watt Intelli-Lamp® with a guaranteed lamp life of 2000 hours

Automatic lamp striking with hot strike prevention that will protect lamp life

Selectable bandpass filters to customize light wavelengths for specific applications

Easy-to-use finger-touch controls with bright LED display



The OmniCure® S1500

The OmniCure® Advantage In Spot Curing Systems

Recognized as the global leader in bonding systems for precision assembly with light-cured adhesives, the OmniCure® family of products provides the power, control and repeatability demanded by high-speed automated manufacturing assembly. The OmniCure® S1500 UV Spot Curing System builds on that leadership by providing first-rate quality, precision and versatility in an easy-to-use, cost-effective system. The OmniCure® S1500 is also designed to adhere to regulatory validations and is RoHS compliant.

Powerful 200 Watt Intelli-Lamp®

The powerful patented 200 Watt Intelli-Lamp® installed in the OmniCure® S1500 guarantees an amazing 2000-hour lamp life and a typical lamp life of up to 4,000 hours. Faster curing is achieved with high UVA irradiance of up to 10W/cm².

Intelligent Operation


The OmniCure® S1500 has a multitude of built-in features that provide greater control, precision and versatility. Features include an adjustable iris, patented Intelli-Lamp® technology, selectable bandpass filters, process alarms, and 'lock out' protection, most of which are found only in higher-priced curing systems. The curing system can also be programmed and controlled externally from a PLC using the 15-pin I/O ports.

Ease-of-Use

With snap-in lamp insertion, finger touch controls, an easy-to-read LED display, process indicators and automatic lamp striking, the OmniCure® S1500 is simple to use. Hassle-free snap-in lamp insertion and a low-noise fan improve ongoing operation.

OmniCure® S1500 Typical Irradiance

S1500	R2000
FILTER (nm)	IRRADIANCE (W/cm ²)
320-500	23
400-500	14.5
320-390	7.3
365	5.9
250-450	19.1
no filter	27.7

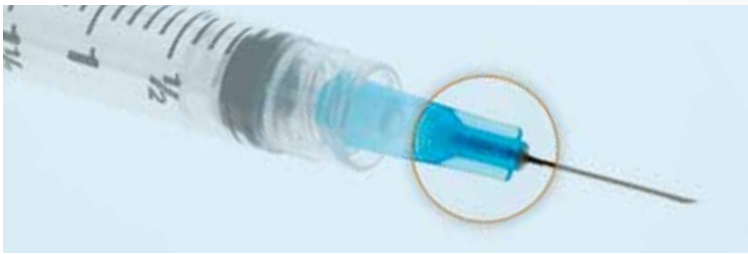

Expanding Your Options

Light Delivery


To accommodate various customer needs, the OmniCure® S1500 can be used with four different light delivery options. Ideally used with a multi-legged High Power Fiber Light Guide to cure multiple sites with a single light source, Single-Legged, Liquid-Filled and Fiber Light Guides are also available.



Optional Accessory:
OmniCure® R2000 Radiometer



1. High Power Fiber Light Guide
2. Liquid Light Guide
3. High Power Fiber Light Line

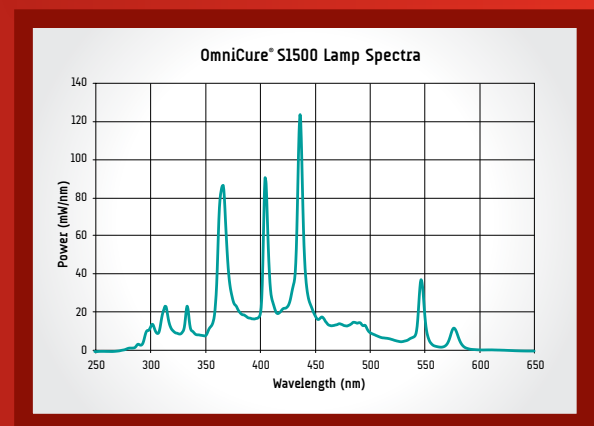

Flexible Spectral Output

The broad spectral output makes the OmniCure® S1500 ideal for a wide range of applications. Selectable bandpass filters allow you to customize the light for your specific application.



FEATURES	BENEFITS
Faster Shutter Activation Time	Improved shutter activation latency increasing productivity
Modified PLC Level	Provides trigger signal versatility by selecting either edge or level modes
200W lamp technology with 2000 hour lamp life guarantee	Less frequent lamp changes for lower operating costs
Intelli-Lamp® Technology to cool lamp and monitor lamp hours	Maintain optimum operating condition, stable lamp output, longer lamp life, accumulated lamp hours
Adjustable light output in 1% increments	Allowing very precise control of output
External PC Controlled	Beneficial for automated assembly processes

DESCRIPTION	
Lamp	High Pressure 200 Watt Mercury Vapor Short Arc
Lamp Life	2000 hours (guaranteed)
Available Filters	Standard: 320-500nm Optional: 250-450nm*, 365nm, 320-390nm, 400-500nm
Panel Controls	Power On/Off, LED Display, Up/Down Adjust Buttons, Start/Stop Button
Panel Displays	Accumulated lamp usage, exposure time, iris setting, lamp on/warm-up status, shutter open, Light Guide detection, shutter/lamp error
Warm-up Period	4 minutes (typical)
Power In	100-240VAC, 50/60Hz
Power Supply	High efficiency, switch mode, line isolated

GENERAL SPECIFICATIONS	
Dimensions (LxWxH)	13.3" x 7.1" x 7.9" (33.8cm x 18.0cm x 20.1cm)
Weight	9.9lbs (4.5kg)
Includes	Lamp Module, Selected Filter (installed), Protective Eyewear, Grounded and Shielded Power Cord, Foot Pedal, Manual
Warranty	1 year (excluding Lamp and Light Guide)

* Blank filter; must be used with Fiber or Extended Range Light Guide



InnoTech
(주)에이이노텍

www.AINNOTECH.com
Email: korea@ainnotech.com
TEL: 02,409,3222 FAX: 02,409,3229



FiberAll
www.FIBERALL.co.kr
광통신 전문 소용품! 파이버올!

서울시 송파구 가락동 10-9 현성 B/D 2F



2260 Argentia Road,
Mississauga, Ontario,
L5N 6H7 CANADA

www.LDGI-OmniCure.com

Telephone: +1 905 821-2600

Toll Free (USA and Canada): +1 800 668-8752

Facsimile: +1 905 821-2055

OmniCure@LDGI.com



PLEASE NOTE: Hg-LAMP CONTAINS MERCURY, Manage in Accord with Disposal Laws, See: www.lamprecycle.org or 1-800-668-8752
For a detailed look at our application solutions visit: www.LDGI-OmniCure.com/applications.php

Lumen Dynamics Group Inc. is certified under the globally recognized ISO 9001 Quality Management System and the ISO 14001 Environmental Management System. Our global customers can trust that Lumen Dynamics strives to be the best possible supplier in all aspects of our business.

OmniCure®, StepCure® and Intelli-Lamp® are registered trademarks of Lumen Dynamics Group Inc. All rights reserved. Lumen Dynamics has made every effort to ensure that the information contained in this specification sheet is accurate. However, we accept no responsibility for any errors or omissions, and we reserve the right to modify design, characteristics and products at any time without obligation.

Contact Lumen Dynamics for prices and availability or to obtain the phone number of your local Lumen Dynamics representative. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form by any means without the prior written consent of Lumen Dynamics Group Inc.